



## Technical Tip M2-07-0002-3

### Studding Issues for Trail Models of 2003 Ski-Doo REV Snowmobiles

**Special tunnel protection and stud patterns are required for 2003 REV's that are going to be studded. Tunnel damage will occur if the proper tunnel protection is not installed. BRP, Inc. has developed two different tunnel protection kits for the REV. The track lug height of the sled will determine the proper kit to use. Contact your BRP, Inc. dealer for more information.**


#### For 2003 REV's with the 1" lug track

- **Ski-doo recommends using the tunnel protection kit part number 861-783-500.**
- **Woody's recommends the following studding procedures:**
  - Stud only down the center of the track.
  - Use one of the following patterns from Woody's Universal Template (COMB-TEMP)
    - 96 Studs Single
    - 96 Studs Double
    - 144 Studs Center Single
    - 144 Studs Center Double & Single
  - ONLY USE 1.075" length Woody's Studs

#### For 2003 REV's with the 1.25" lug track

- **Woody's recommends the following studding procedures:**
  - Stud only down the center of the track.
  - Use one of the following patterns from Woody's Universal Template (COMB-TEMP)
    - 96 Studs Single
    - 96 Studs Double
    - 144 Studs Center Single
    - 144 Studs Center Double & Single
  - ONLY USE 1.325" length Woody's Studs
  - Woody's Big Nut ALN2-4500 are recommended with the 1.325 length stud.

**Review the snowmobile and track manufacturer's studding recommendations in your owner's manual. You may void your warranty if their recommendations are not followed. .**

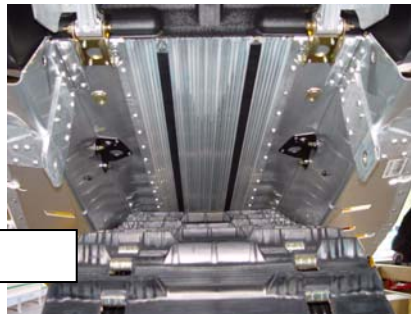

**2003 Rev Tunnel Configuration**